
# STRANGE PETIT

1.0

27 - Sep-2019

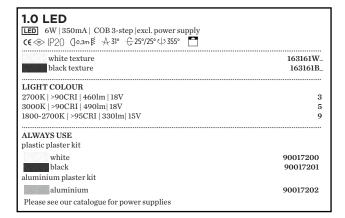


plaster kit (has to be ordered separately)


90017202 Aluminium plaster kit



90017200 / 90017201 Plastic plaster kit








90017202


90017200 / 90017201







### **DIMENSIONS**




# MOUNTING INSTRUCTION

- Make a hole in the ceiling according to the prescribed dimensions. The plaster kit is always needed.
- 2 Insert the plaster kit through the ceiling hole under an angle. Fix the plaster kit with screws through the ceiling plates aiming in the perforated area. Plaster the borders seamlessly.

## **POWER CONNECTION**

SERIAL CONNECTION - for LED

Always use a power supply according to the specifications of the LED module.



4 Insert the housing in the installed plaster kit and lock the LED module into the housing by a quarter turn.




INSTALLATION INSTRUCTIONS
PAGE 1/2

# STRANGE PETIT 1.0 PLASTER KIT


27 - Sep-2019




plaster kit (has to be ordered separately)



Note: there are 4 flexible legs on the plaster kit.



When the plaster board thickness is 13mm, the legs can be left opened.



When the plaster board thickness is 10mm, the legs have to be folded.

