


SPYDER


07-12-2015

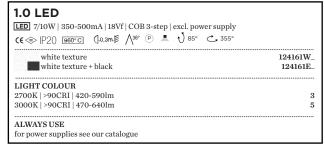




SAFETY DISTANCE FOR HALOGEN LAMPS



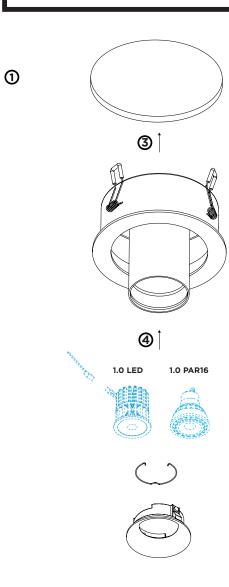

DIMENSIONS

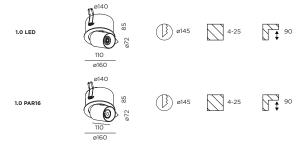


MOUNTING INSTRUCTION

Make a hole in the ceiling according to the prescribed dimensions.

POWER CONNECTION

SERIAL CONNECTION - for LED

Always use POWER SUPPLY according to the specifiations of the LED-module



PARALLEL CONNECTION - for PAR16



- 3 Insert the fixture in the hole. The lens of the SYPDER can be rotated without rotating the trim border.
- 4 Insert the lamp and fix with spring into the inner part.